

# Installing the AEGIS™ SVP Tip

## 10:1 probe

1. Remove the protective cap



2. Remove the plastic sleeve




# Installing the AEGIS™ SVP Tip

3. Probe with sleeve removed




4. Attach ground lead

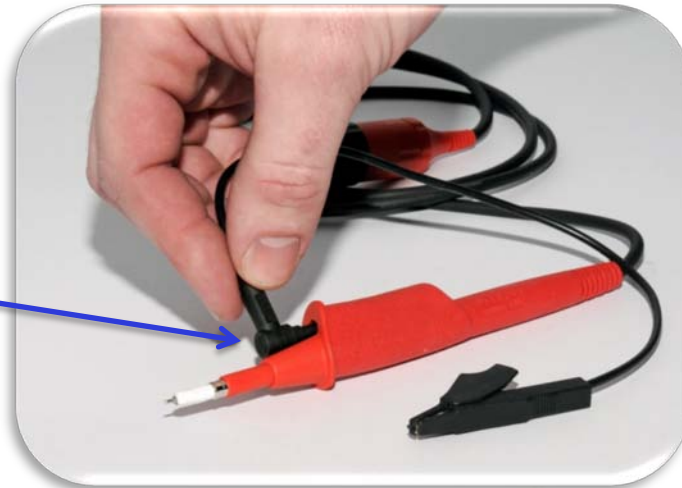

# Installing the AEGIS™ SVP Tip

5. Install the AEGIS™ SVP tip over the probe tip

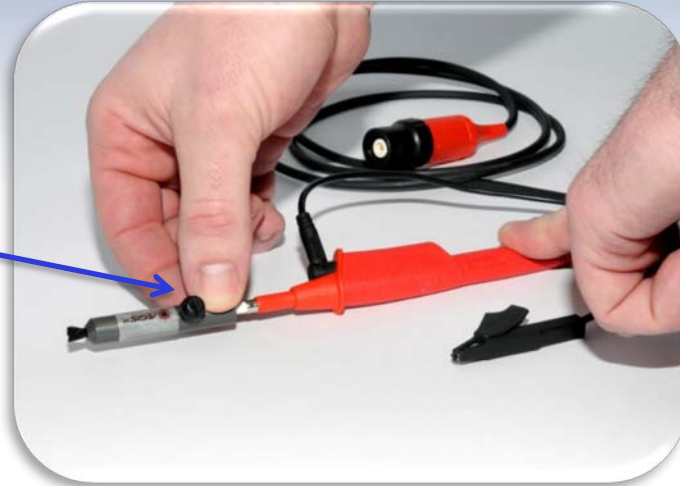

6. Secure the tip to the probe using the thumb screw. Be careful not to over tighten.

